AD Enclosure - F Sector

X3484

F0

E46

F4

Transfer Hall

X3508

X3508

F3

F2

X3301

X3260

F1

X8111

X6488

X8111

X6550

X6488

X5550

NO Exit

P1 Line

A1 Line

NO Exit

Emergency Exits to F0-MI Crossover
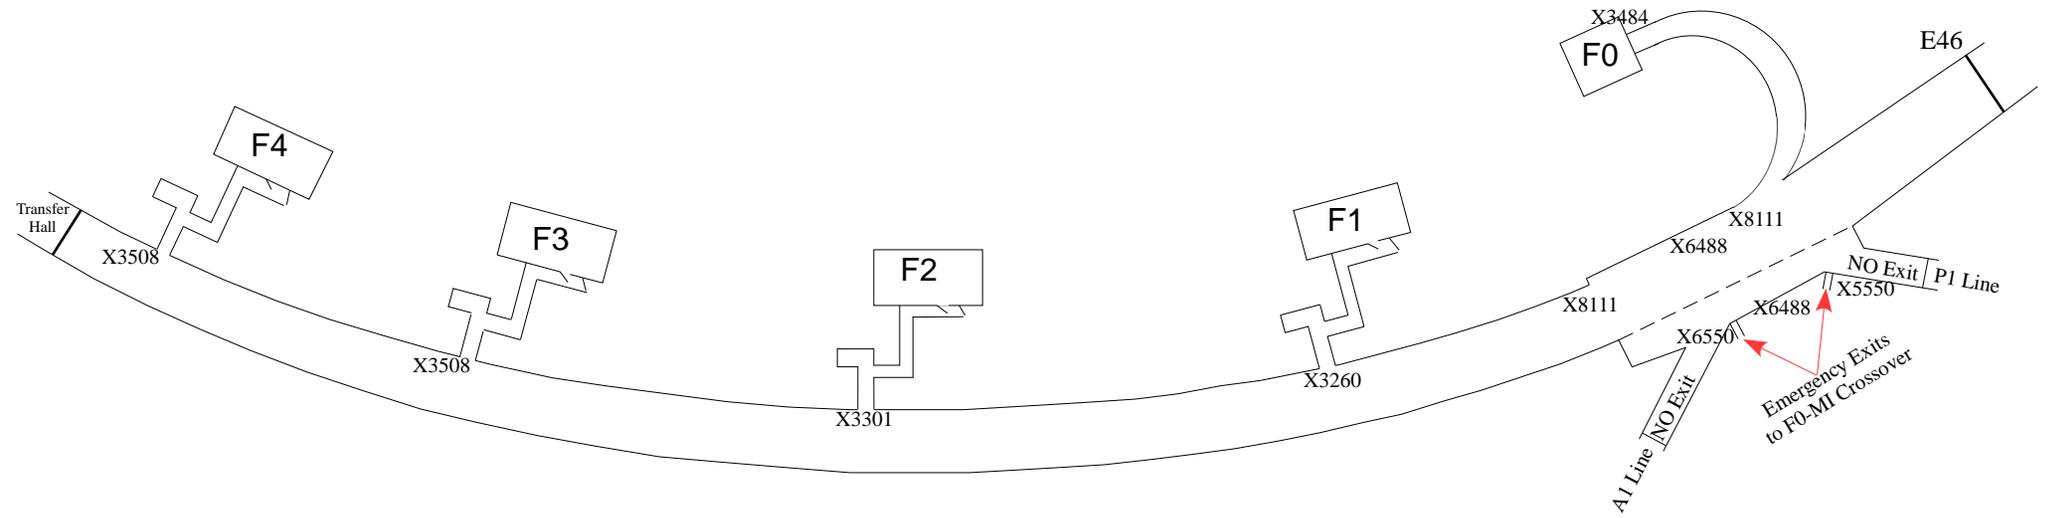
Note: To access the Tevatron F-Sector you will need a F-Sector key.

spb 5 Sept 2019