


AD Enclosure - M01

Search and Secure Procedure

M01
M01.V1.1

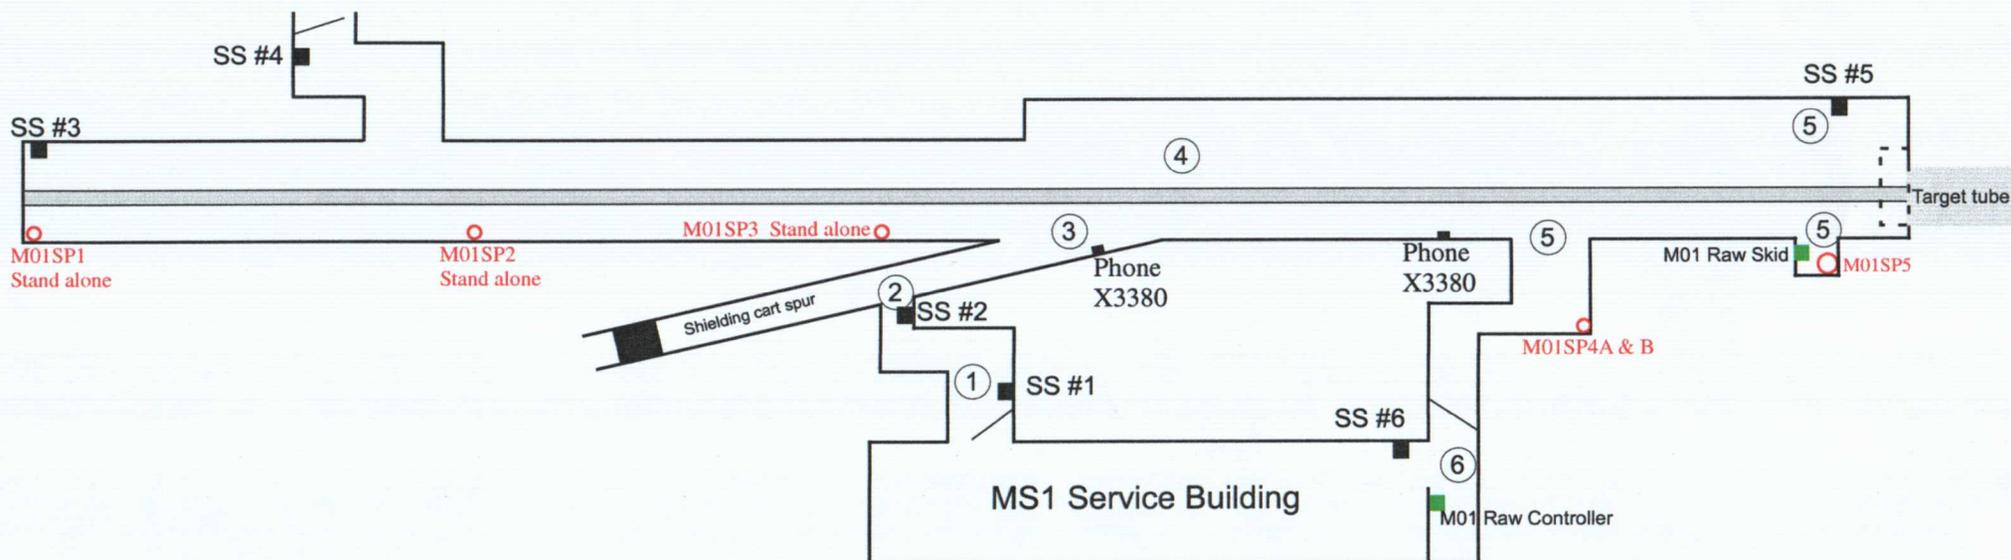

- 1) "A" and "B" start, reset Interlock Box #1.
- 2) "A" and "B" reset Interlock Box #2. "A" continues to hold while "B" sweeps the shielding cart spur.
- 3) "A" holds while "B" sweeps the tunnel and reset Interlock Boxes #3 and #4.
- 4) "B" joins "A" and they sweep the hall.
- 5) "A" holds while "B" resets Interlock Box #5 and checks the Target tube area then the RAW skid area.
- 6) "B" joins "A" and exit and reset Interlock Box #6.

Reviewed AD/RSO

Date

Gary Luster

1/29/14

Approved AD/OPS Dept. Head

Date

Daniel Johnson

2/3/14

CONTROLLED DOCUMENT

Users are responsible for ensuring they work to the latest approved revision. Printed or electronically transmitted copies are uncontrolled.

spb 29 Jan 2014
Version 1.1