


AD Enclosure - MI31 Pelletron - Bottom Level

MI31.Pelletron.V1.1

Search and Secure Procedure

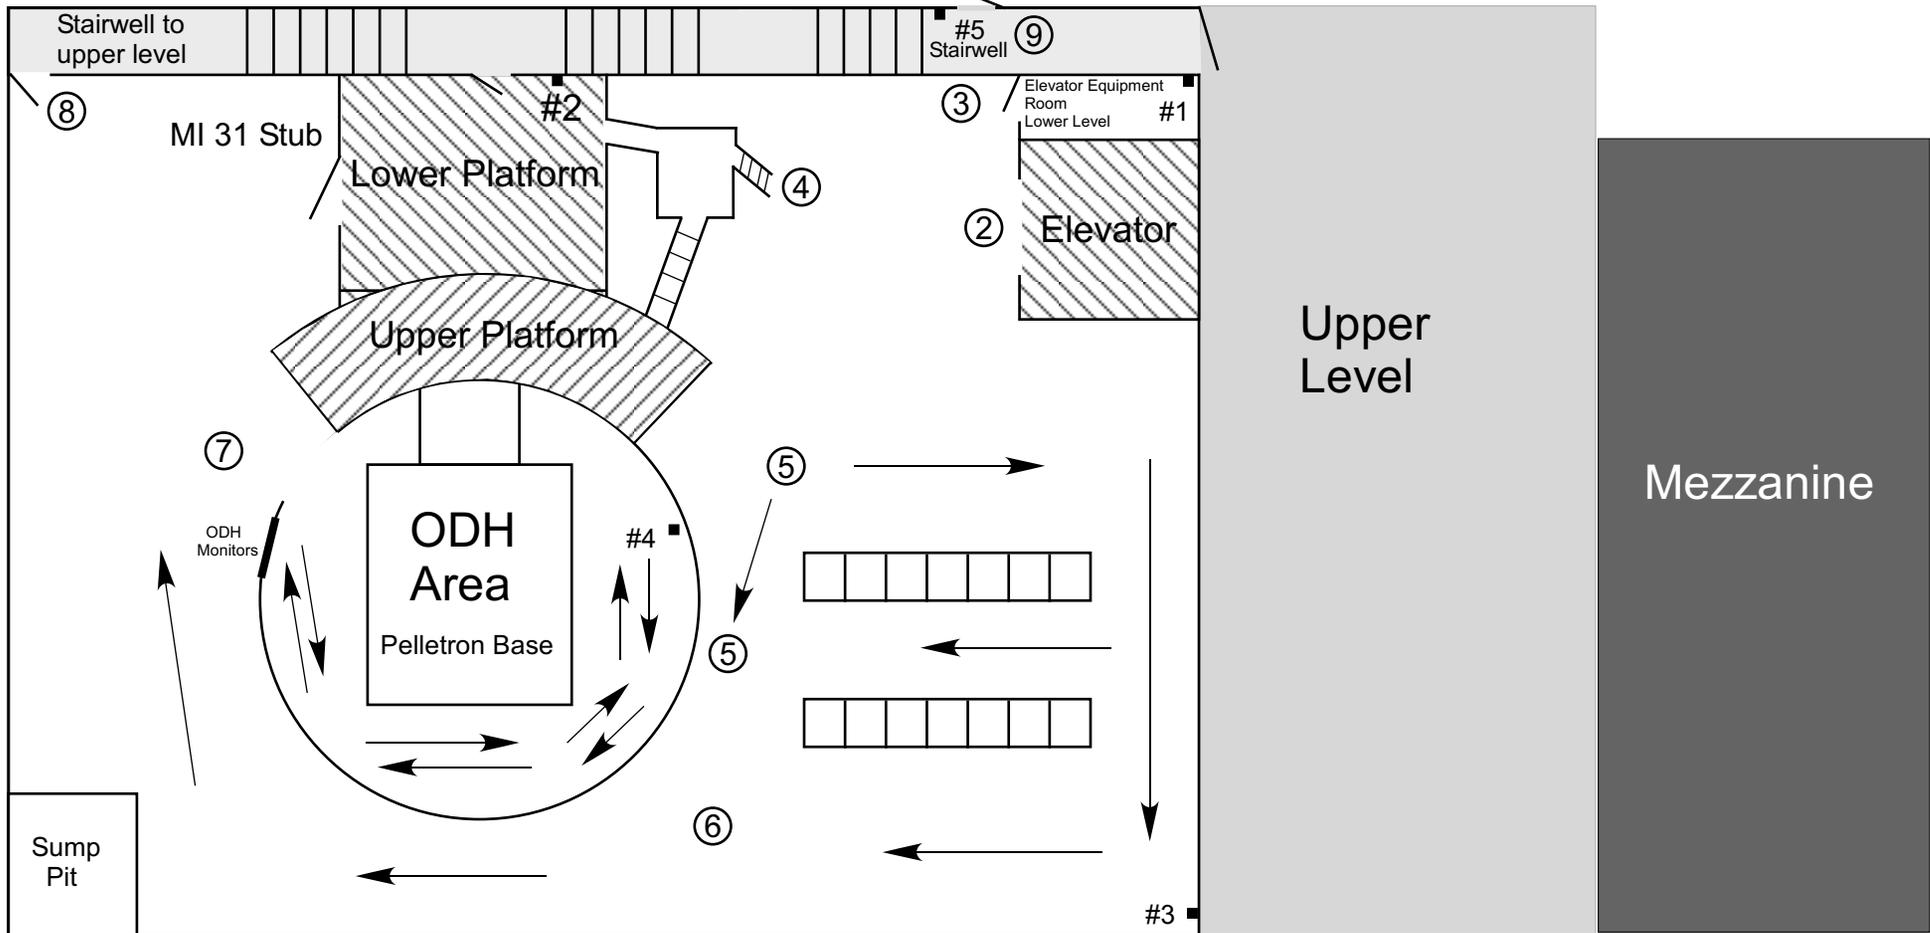

- 2) "A" and "B" exits the elevator leaving to the door open so no one can use it during the search.
- 3) "A" holds while "B" sweeps the Elevator Equipment room and resets Box #1.
- 4) "A" holds while "B" uses the ladder to sweep the lower platform area and resets Box #2 and the upper platform area. In addition "B" verifies the Access Port to the Pelletron is bolted shut.
- 5) "A" holds while "B" sweeps the Relay Rack area and resets Box #3.
- 6) "A" joins "B" and together sweep the area to the entrance to Pelletron Base.
- 7) "A" holds while "B" sweeps the Pelletron Base area and resets Box #4. The Base area is an ODH area, take an ODH monitor
- 8) "A" and "B" sweep the stairwell to the Upper Level.
- 9) Reset Box #5 and exit to the Upper level.

Reviewed AD/RSO	Date
<i>Michael Cleary</i>	6-30-09
Approved AD/OPS Dept. Head	Date
<i>[Signature]</i>	7-1-09

Now proceed to Page 1.