AD Enclosure - Muon Transport-US

Search and Secure Procedure

Muon Transport-US

MuonTrans-US.V1.0

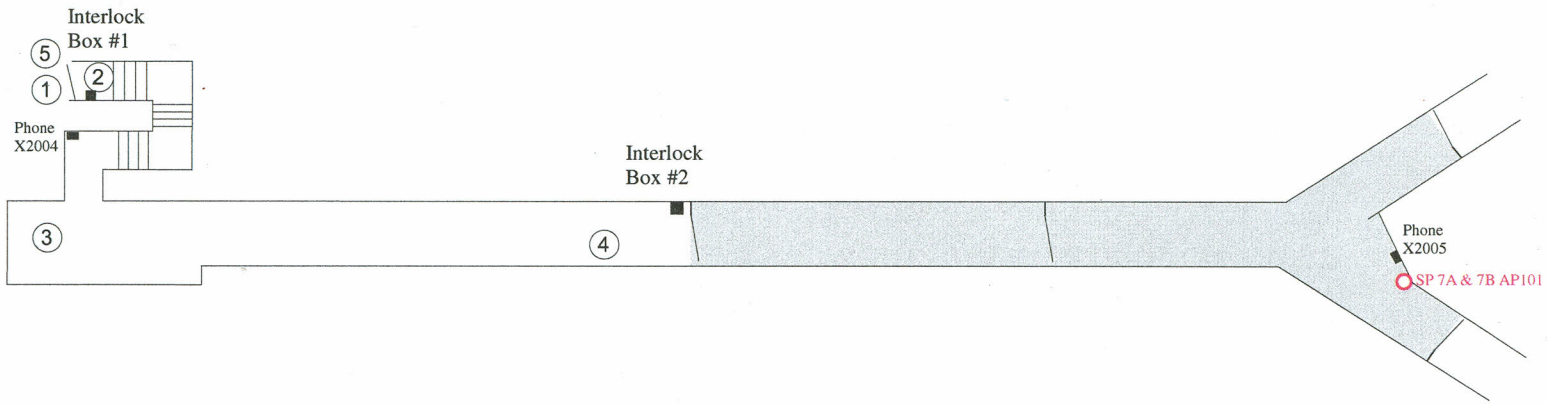

0) You will need to check the Transport area C-Blocks in AP0, verify that the chains are in place and locked with 2 padlocks. Bring AP0 keys.
1) "**A**" and "**B**" enters the Transport enclosure from the downstream end of AP0.
2) "**A**" and "**B**" resets Interlock Box #1 at entrance at top of stairwell.
3) "**A**" holds while "**B**" checks the upstream section.
4) "**A**" and "**B**" sweep the area to reset Interlock Box #2.
5) "**B**" and "**A**" Control Access out of the Enclosure at AP0.

Reviewed AD/RSO	Date
Marcelyn Walter	3/27/17
Approved AD/OPS Dept. Head	Date
[illegible]	3/27/17

CONTROLLED DOCUMENT
Users are responsible for ensuring they work to the latest approved revision. Printed or electronically transmitted copies are uncontrolled.